



Mi-Si Volume & Tone Control Module

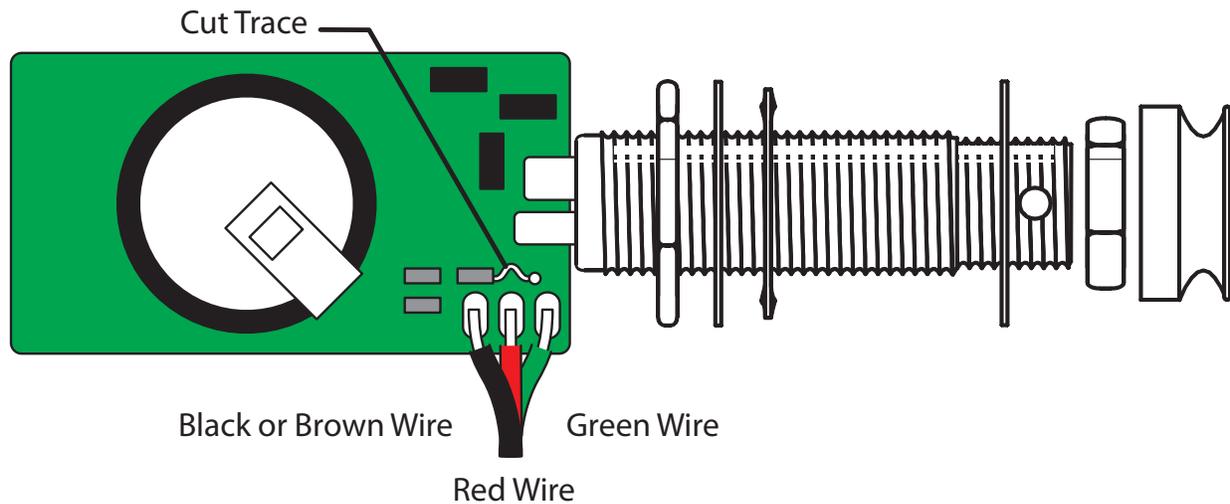

1. Position the Simple Jack circuit board so that the round super capacitor is facing upward and the 1/4" output jack is to the right.
2. Carefully cut the trace located above the red wire with an X-Acto knife.
3. Solder the black or brown wire of the Volume & Tone Control Module to the left solder pad.
4. Solder the red or orange wire to the center solder pad.
5. Solder the green wire to the right solder pad.

IMPORTANT: Do not over heat solder pads. Excessive thermal exposure may cause separation of pads from the circuit board. Installation and wiring should be performed by a qualified repair person with experience in fine soldering.

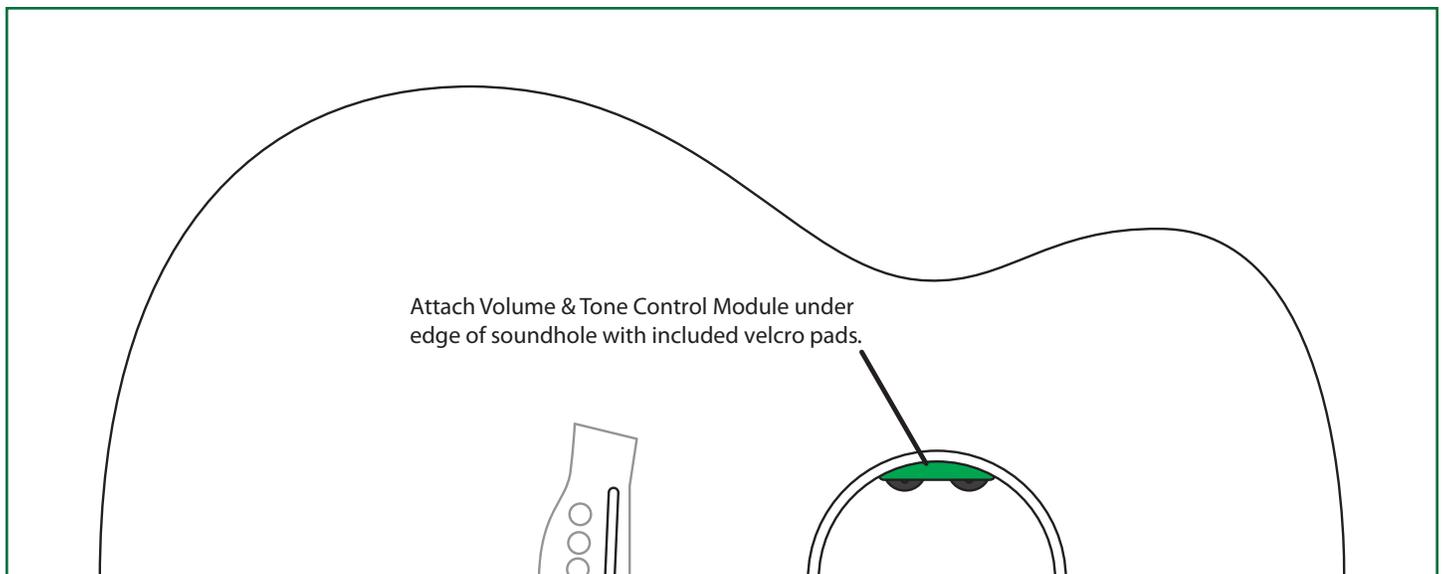

www.mi-si.com